SUB-MINIATURE



SMART-PRIME ELECTRONIC TRAP PRIMER INSTALLATION & MAINTENANCE INSTRUCTIONS

DESCRIPTION: www.pppinc.net

SMP-500 is a plug-in electronic trap primer (the plug-in connection is only provided with 115V version). The trap primer functions at a pre-selected time delivering potable water across an air gap funnel.

CAUTION:

SMP-500 should not be defined as a pressure feed trap priming system. The trap primer should be mounted 12" above the finished floor measured from the bottom of the air gap fitting with a straight drop before turning with your makeup line to the floor drain. This trap primer is a gravity feed system so the makeup line to the floor drain must have continuous slope.

OPERATION:

When the timer energizes the solenoid valve discharges potable water across the air gap funnel for a set amount of time, and when the timer deactivates the solenoid valve closes. Approximately 2 ounces of water at 20 PSIG is discharged in a 24 hour cycle.

WARNING:

When using electrical appliances basic precautions should always be followed including the following:

a.) Read all of the instructions before using the appliance.

b.) Do not use outdoors.

c.) To disconnect, remove the plug from the outlet, grasp the plug, not the cord and pull. Do not operate the unit with a damaged electrical cord.

d.) If the primer is damaged please consult factory.

INSTALLATION:

- 1. Trap primer must be a minimum of 12" above the finished floor of drain(s). This valve serves 1-4 floor drains.
- 2. SMP-500 must be installed in an accessible location. Model #D-814PC or SS access door is the ideal size for concealing this valve behind the wall.
- 3. Connect ½" NPT connection from the potable water supply using Teflon tape only (Pipe dope will void the warranty).
- 4. Connect primer makeup line to either a single feed or with a DU-U distribution unit to accommodate up to 4 floor drains. Ensure assembly is plumb and square.
- 5. Make absolutely sure your makeup line to the floor drain has continuous slope.

FUNCTIONS:

- 1. On Time: 0.5 seconds Off Time: 45 Minutes factory pre-set.
- 2. Press test switch to check functionality of unit.
- 3. Yellow LED's to indicate status of valve.
- 115V AC/DC 60Hz (Standard).

Precision Plumbing Products

Division of JL Industries, Inc.

802 SE 199th Ave Portland, Oregon 97233

T (503) 256-4010 F (503) 253-8165













Rev 04/15

LOCATIONS WHEN ALIGN

1/2"FEMALE N.P.T.

SMP-500-115V